


2.2. Panel de Control

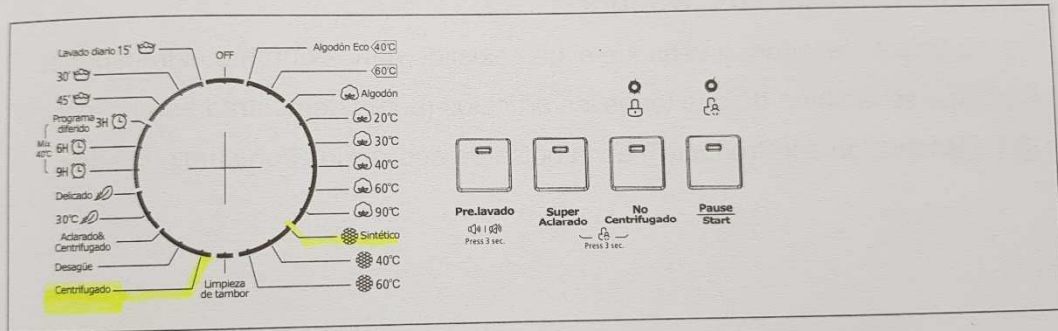

15

Button functions

There are 8 types of wash selection functions on the display. By

- 1) ECO cotton: with the corresponding temperature selections 40°C, 60°C.
- 2) Cotton: 30°C, 40°C, 60°C, 60°C, 90°C, cold.
- 3) Synthetics: 40°C, GOSC cold :
- 4) Spin: It is also possible to select rinse only or spin.
- 5) Delicate laundry: 30°C, cold.
- 6) Drum cleaning: 90°.
- 7) Delayed program: you can choose 3H, H, 9H
- 8) Daily wash: you can choose 15', 30', 45'.

Washing clothes

Place the laundry in the machine.

For a simple wash, put the detergent in the left-hand tray. Use a powdered product, or more simply, a capsule.

For a pre-wash, add detergent to the right-hand tank.

For the softener product, use the bottom middle.

Make sure the water is turned on and the electricity is connected.

Select the programme with the rotary knob (see above).

Press the "Start/Pause" button.