
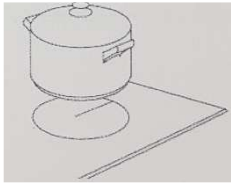 
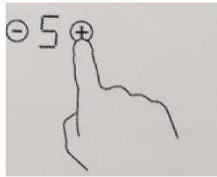 


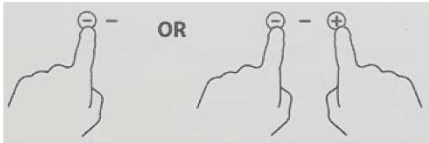 

Operating instructions Hotplate

Start cooking

After the power is turned on, the buzzer beeps, all the indicators light up for 1 second and then go out, indicating that the ceramic hob has entered standby mode.

Touch the ON/OFF control. All indicators show "-".	
Place a suitable pan on the cooking area you wish to use. - Make sure that the bottom of the pan and the surface of the cooking zone are clean and dry.	
Select a heat setting by touching the "-" or "+" control. - If you do not select a heat setting within one minute, the ceramic hob will automatically switch off. You will have to start again from step 1. - You can change the heat setting at any time during cooking. - By holding down either of these keys, the value is adjusted up or down.	

End of cooking

Switch off the cooking zone by scrolling down to "0" or by touching the "-" and "+" controls simultaneously Together.	
Switch off the entire hob by touching the ON/OFF control.	

Beware of hot surfaces

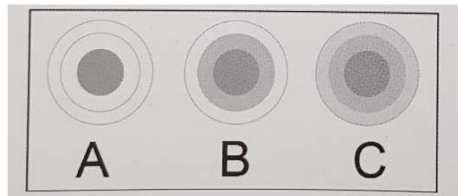
The letter "H" indicates that the cooking area is still hot to the touch. It will disappear when the surface has cooled to a safe temperature. It can also be used as an energy-saving function: if you want to heat other pans, use the still hot hob.



Using the multi-zone function

The function only works in the 3-circle cooking zone.

The triple cooking zone has two cooking zones that you can use: a middle section and an outer section. You can use the middle section (A) independently or both sections (B) or (C) at the same time.



Activation of the multi-zone

Adjust the heater setting between the power	
The middle section of the multi-zone cooking zone lights up.	
Touch the multi-zone control once, section (B) will operate.	
The firing zone indicates "=" and "6" alternately	
Touch the multi-zone control a second time, section (C) operates	
The cooking zone indicates "=-" and "6" alternately	

Deactivation of the multi-zone


If the multi-zone cooking zone is operating in section (B), touching the multi-zone control twice will return to section (A) and the multi-zone will be deactivated.	
If the multi-zone cooking zone is operating in section (C), touching the multi-zone control once will return it to section (A) and the multi-zone is deactivated.	
After deactivating the multizone, the cooking zone indicator shows	

Locking the controls

- You can lock the controls to prevent unintended use (e.g. children accidentally turning on the cooking zones).

- When the controls are locked, all controls except the ON/OFF control are disabled.

To lock the controls

Touch the touch lock control 	The timer indicator shows 'Lo'.
---	---------------------------------

To unlock the controls

Make sure the ceramic hob is switched on.

Touch and hold your finger on the touch lock control for a while.



ATTENTION: When the hob is in lock mode, all controls are disabled except the ON/OFF control. You can always turn off the ceramic hob with the ON/OFF 0 control in case of emergency, but you must first unlock the hob during the next operation.

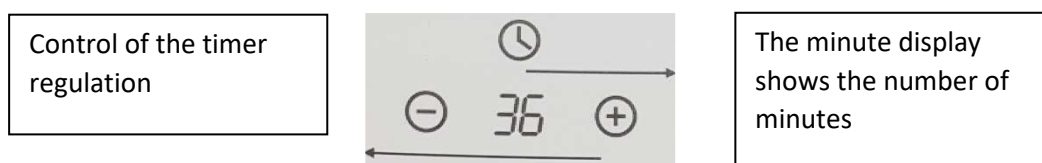
Timer control

You can use the timer in two different ways:

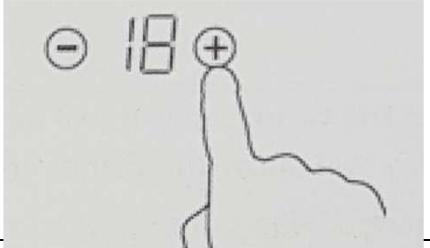
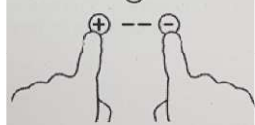
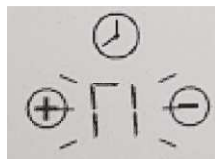
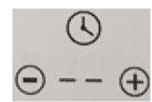
- You can use it as a minute counter. In this case, the timer does not switch off any cooking zone at the end of the programmed time.
- You can set it to switch off one or more cooking zones after the set time has elapsed.

The maximum duration of the timer is 99 minutes.

Timer overview



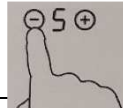

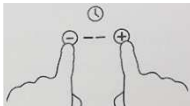
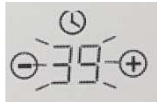
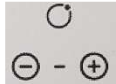
Using the timer as a timer - If you do not select a cooking zone

<p>Make sure the hob is switched on. Note: You can use the timer even if you do not select a cooking zone.</p>	
<p>Touch the timer control, the timer indicator flashes; Set the time by touching the timer "-" or "+" control.</p>	
<p>By touching the "-" and "+" buttons simultaneously, the timer is cancelled and "--" appears in the minute display.</p>	
<p>When the time is set, the countdown starts immediately. The display shows the remaining time and the timer indicator flashes for 5 seconds.</p>	
<p>The buzzer will beep for 30 seconds and the timer indicator will display "--" when the setting is complete.</p>	

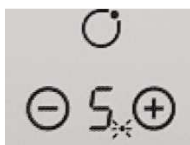
Council:

- Touch the "-" or "+" control of the timer once to decrease or increase by one minute.
- Touch and hold the "-" or "+" control on the timer to decrease or increase by 10 minutes.
- If the setting time exceeds 99 minutes, the timer automatically returns to 0 minutes.

Setting the timer to turn off a cooking zone

Define an area	
Touch the "-" or "+" of the corresponding cooking zone for which you wish to set the timer	
Set the time by touching the "-" or "+" button on the timer.	
By touching the "-" and "+" simultaneously, the timer is cancelled and the minute display shows "--".	
When the time is set, the countdown starts immediately. The display shows the remaining time and the timer indicator flashes for 5 seconds.	
When the cooking time expires, the corresponding cooking zone is automatically switched off.	

a) The red dot next to the power level indicator lights up to indicate that the zone is selected.



b) If you wish to change the time after the timer has been set, you must start from step 1.

Protection against overheating

A temperature sensor monitors the temperature inside the ceramic hob. When an excessive temperature is detected, the ceramic hob automatically shuts down.

Residual heat warning

When the hob has been in operation for some time, there is residual heat. The letter "H" appears to warn you to stay away from it.

Default operating time

Another safety feature of the hob is the automatic shut-off. This occurs whenever you forget to switch off a cooking zone. The default switch-off times are shown in the table below:

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	4	4	4	2	2	2